SCAG®
POWER EQUIPMENT

MODEL GC-STT-CS

THIS MANUAL CONTAINS THE OPERATING INSTRUCTIONS AND SAFETY INFORMATION FOR YOUR SCAG ACCESSORY. READING THIS MANUAL WILL PROVIDE YOU WITH MAINTENANCE AND ADJUSTMENT PROCEDURES TO KEEP YOUR ACCESSORY PERFORMING TO MAXIMUM EFFICIENCY. THE SPECIFIC MODELS THAT THIS BOOK COVERS ARE CONTAINED ON THE INSIDE COVER. BEFORE OPERATING YOUR MACHINE, PLEASE READ ALL THE INFORMATION ENCLOSED.

OPERATOR'S MANUAL

PART NUMBER 03237
Rev. 01

WARNING

FAILURE TO FOLLOW SAFE OPERATING PRACTICES MAY RESULT IN SERIOUS INJURY.

* Keep all safety shields in place.
* Before performing any maintenance or service, stop the machine and remove the spark plug wire.
* If a mechanism becomes clogged, stop the engine and wait for all moving parts to come to a complete halt before cleaning.
* Keep hands, feet and clothing away from power-driven parts.
* Read this manual completely as well as the Operator's Manual that came with your mower.
* Keep others off the mower (only one person at a time).

REMEMBER - YOUR MOWER IS ONLY AS SAFE AS THE OPERATOR!

Hazard control and accident prevention are dependent upon the awareness, concern, prudence, and proper training of the personnel involved in the operation, transport, maintenance, and storage of the equipment.

This manual covers the operating instructions
and illustrated parts list for:

GC-STT-CS52 with a serial number of E1000001 to E1099999
GC-STT-CS61 with a serial number of E1200001 to E1299999
GC-STT-CS72 with a serial number of E1400001 to E1499999

1.1 INTRODUCTION

This manual has been prepared to provide the information you need to correctly assemble, operate, and maintain this grass catcher. Read it carefully and keep it for future reference.

THE REPLACEMENT OF ANY PART ON THIS PRODUCT BY OTHER THAN THE MANUFACTURER'S AUTHORIZED REPLACEMENT PART MAY ADVERSELY AFFECT THE PERFORMANCE, DURABILITY OR SAFETY OF THIS PRODUCT.

USE OF OTHER THAN ORIGINAL SCAG REPLACEMENT PARTS WILL VOID THE WARRANTY.

If additional information or service is needed that is not outlined in this manual, please contact your Scag Power Equipment dealer. Scag dealers are trained in the latest service methods and carry a full line of Scag replacement parts.

When ordering parts, always provide the complete model number of your catcher.

All information provided in this manual is based upon information available at the time of printing. Scag Power Equipment reserves the right to make changes at any time without notice or obligation.

1.2 DIRECTION REFERENCE

The "Right" and "Left", "Front" and "Rear" of the machine are referenced from the normal operating position.

2.1 SAFETY AND OPERATING INSTRUCTIONS

-NOTE-
To avoid personal injury, it is imperative that all safety instructions be observed.

1. **Read this operator's manual and the operator's manual that is supplied with the machine this attachment is used on.**

A replacement manual is available from your authorized Scag Service Dealer or by contacting: Scag Power Equipment, Service Department at P.O. Box 152, Mayville, WI 53050. You may also contact us through our website at www.scag.com. The manual for this grass catcher can be downloaded by using the model and serial number or use the contact form to make your request. Please indicate the complete model and serial number of your Scag product when requesting replacement manuals.

⚠WARNING

DO NOT OPERATE WITHOUT DISCHARGE CHUTE, MULCHING KIT, OR ENTIRE GRASS CATCHER INSTALLED

2. Before dumping the debris, disengage the mower, stop the engine and wait for all movement to stop.

3. **ALWAYS** turn the engine **OFF**, remove the key and wait for all movement to stop before servicing or cleaning the mower or the grass catcher.

⚠DANGER

ROTATING BLOWER BLADES

STOP ENGINE BEFORE ENTERING CHUTE

CONTACT CAN INJURE

4. Do not modify or alter any component of the grass catcher attachment or mower.

5. Do not allow any passengers to ride on the grass catcher attachment or on the mower.

2.2 GRASS CATCHING OPERATION

1. With the hopper door closed, engage the deck drive.

2. Proceed to mow until the hopper is full.

3. When dumping the hopper into a disposal area:

⚠WARNING

DO NOT DUMP CLIPPINGS IN A DISPOSAL AREA THAT IS BURNING

A. Disengage the deck drive, apply the parking brake and allow all moving parts to come to a complete stop.

B. Pull downward on the hopper door handle to allow the hopper sweeper to remove the material from inside the hopper. See Figure 2-1.

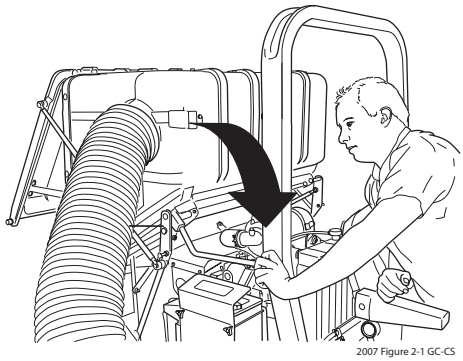

FIGURE 2-1

C. Once the material has been completely removed from the hopper, lift the hopper door handle to close the hopper door and lock into place. See Figure 2-2.

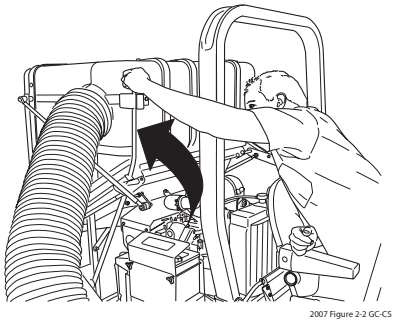

FIGURE 2-2

4. When dumping the hopper into a disposal area, inspect the hopper debris screen for material. When the debris screen is full of material, the grass catching ability may suffer. Frequency of cleaning the hopper debris screen will vary depending on conditions.

5. To clean the hopper debris screen;

A. Disengage the deck drive and allow all moving parts to come to a complete stop.

B. Apply parking brake and shut off the engine.

C. Stand on the left side of the hopper assembly.

D. Unhook the debris screen latches and remove the debris screen from the hopper. See Figure 2-3.

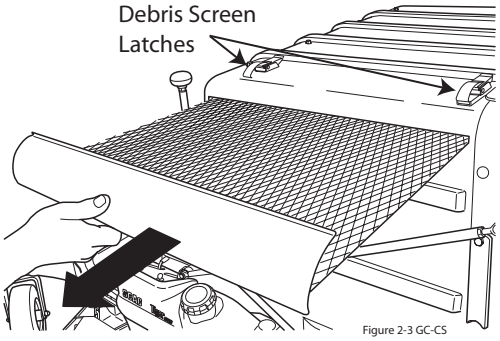

FIGURE 2-3

E. Remove material from the debris screen and reinstall. Secure by latching the debris screen latches.

6. When service is needed inside the hopper, disengage the deck drive and allow all moving parts to come to a complete stop. Shut off the engine and apply the parking brake. Rotate the hopper door prop rod upward until it contacts the hopper door. This will prevent the hopper door from moving until the service is complete. See Figure 2-4.

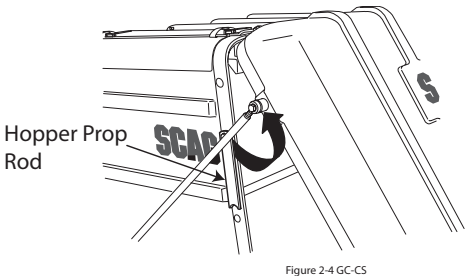

FIGURE 2-4

3.1 ASSEMBLY INSTRUCTIONS

-NOTE-

Use the illustrated parts list as a part number reference when following the assembly instructions.

1. Remove all packaging materials. Lay out the mounting hardware and the catcher assembly parts for easy access. Prepare the work area making sure that it is a clean, safe environment.

2. Remove the discharge chute from the cutter deck. See Figure 3-1.

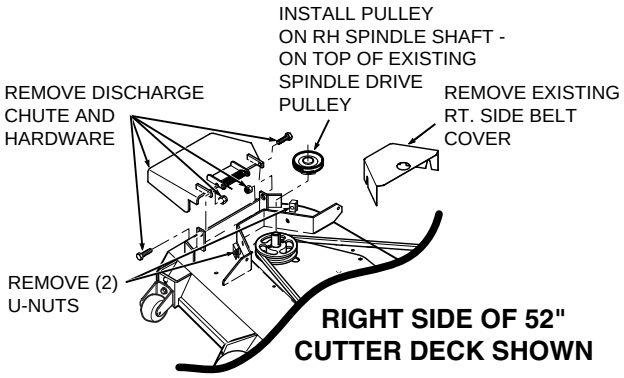

(Note: Some parts not shown for viewing purposes.)

FIGURE 3-1

-NOTE-

Do not discard the discharge chute or mounting hardware. The discharge chute MUST be reinstalled any time the grass catcher has been removed from the machine.

⚠WARNING

DO NOT OPERATE WITHOUT DISCHARGE CHUTE, MULCHING KIT, OR ENTIRE GRASS CATCHER INSTALLED

3. Remove the right side belt cover to gain access to the spindle assembly. Remove the u-nuts from the cutter deck bracket. See Figure 3-1.

4. Install the grass catcher pulley onto the spindle assembly. Apply loctite to both pulley setscrews and tighten. See Figure 3-1.

5. Install the blower mounting bracket to the deck using 1/2-13 x 1-1/2" hex head bolts (p/n 04001-71), 1/2" spring lockwashers (p/n 04030-06), and 1/2-13 elastic stop nuts (p/n 04021-07). See Figure 3-2, Page 4. Do not fully tighten the hardware at this time.

6. **This step is for 52" cutter decks only.** Block the right front side on the cutter deck and remove the hang chain. Install the deck lift link. Secure using hex head bolts (p/n 04001-32, 04001-20), flatwashers (p/n 04041-07), spacers (p/n 43212), and serrated flange nuts (p/n 04019-04). See Figure 3-2, Page 4.

7. Install the blower assembly to the mounting bracket and secure with the mounting pin and hair pin. See Figure 3-3, Page 5.

8. Align the blower assembly with the discharge opening of the cutter deck. Tighten the hardware for the mounting bracket. Then tighten the hardware for the catch plate. Install the large hair pin through the rear hole in the discharge chute mounting bracket. See Figure 3-3, Page 5.

9. Install the new belt cover from the cutter deck to the blower mounting bracket and secure with the original belt cover plastic wing nuts.

52" Cutter Deck

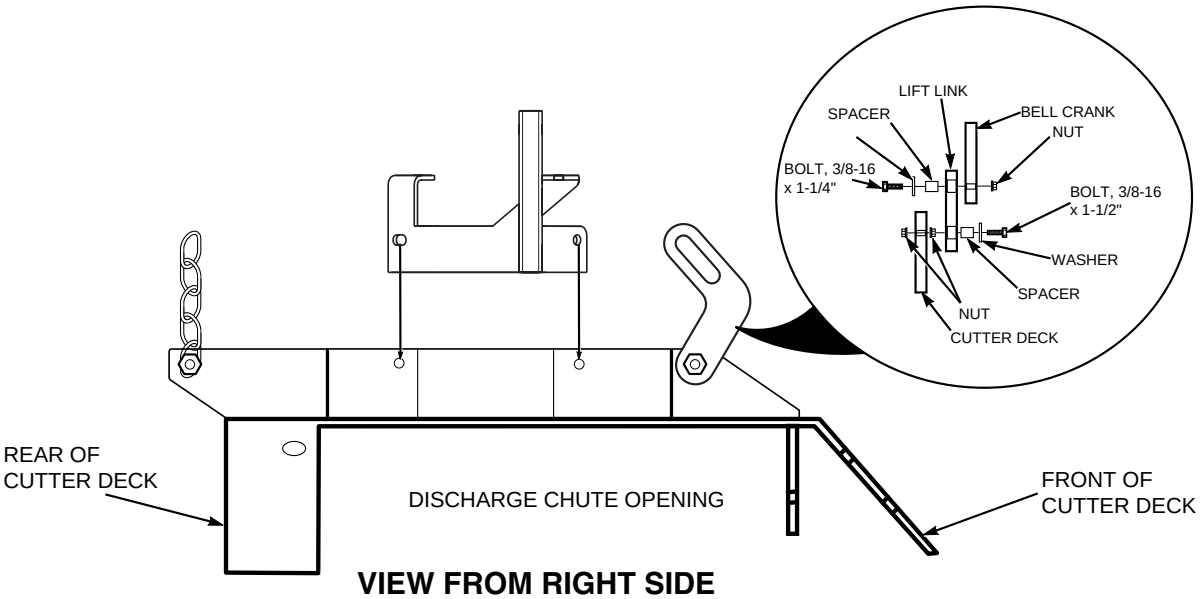

VIEW FROM RIGHT SIDE OF CUTTER DECK

Figure 2-52"GC-STT install art

61" & 72" Cutter Decks

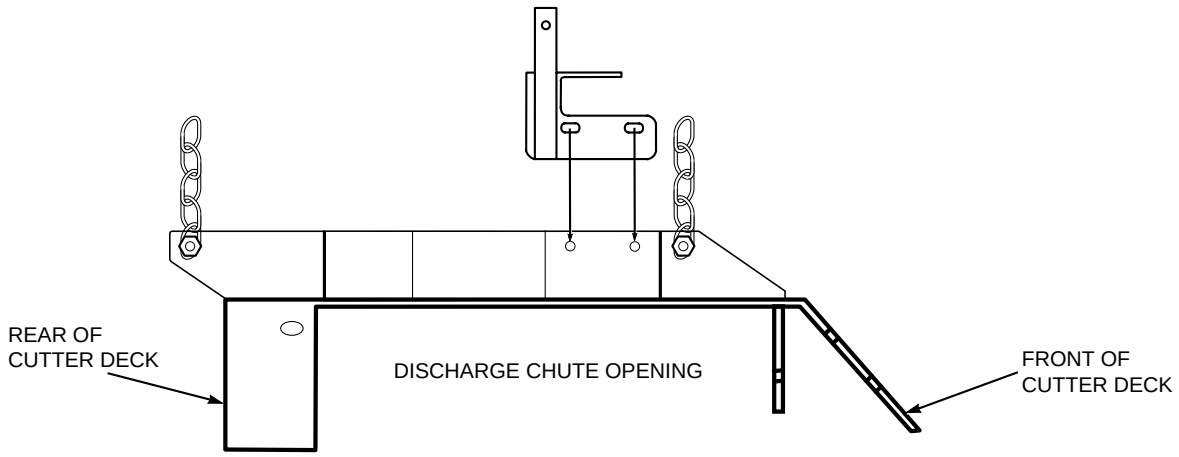

VIEW FROM RIGHT SIDE OF CUTTER DECK

Figure 2-61"GC-STT install art

FIGURE 3-2

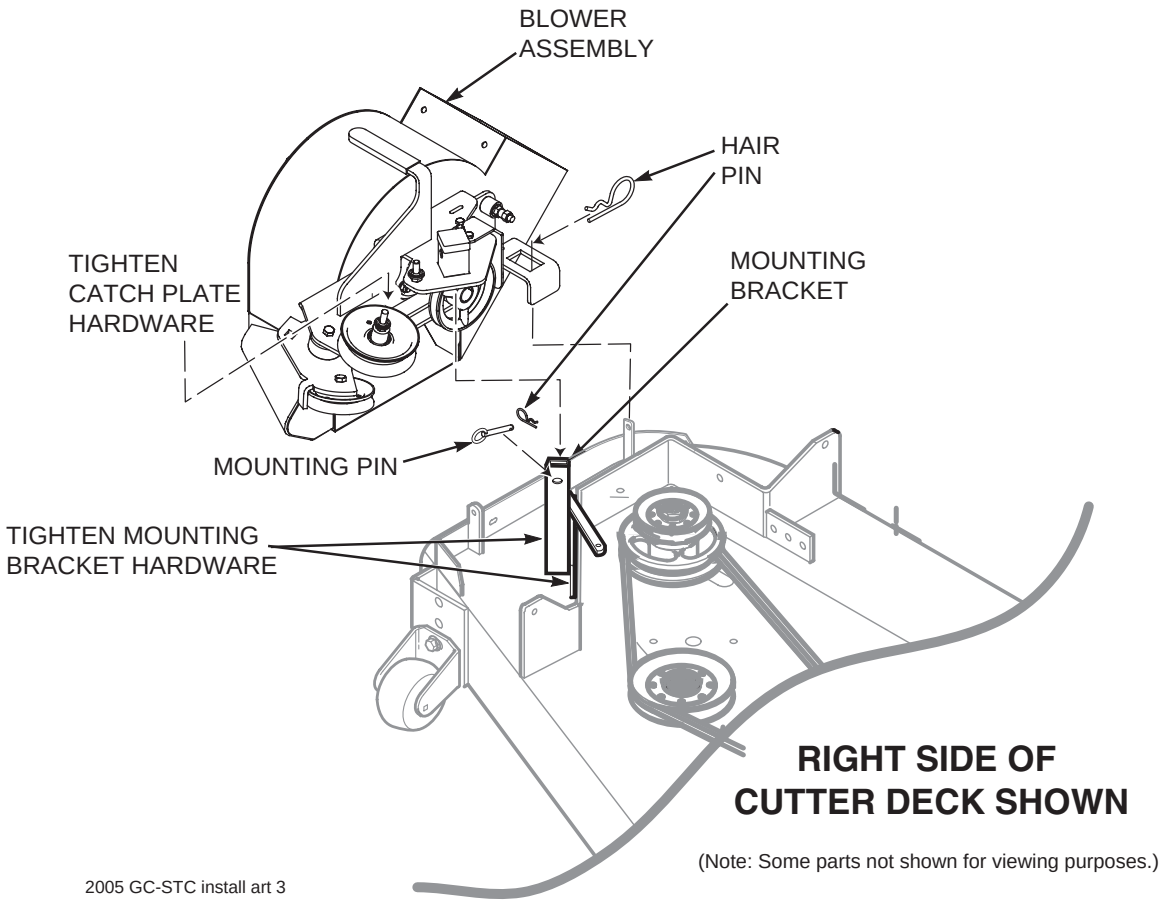
BLOWER
ASSEMBLY
HAIR
PIN
TIGHTEN
CATCH PLATE
HARDWARE
MOUNTING
BRACKET
MOUNTING PIN
TIGHTEN MOUNTING
BRACKET HARDWARE
RIGHT SIDE OF
CUTTER DECK SHOWN
(Note: Some parts not shown for viewing purposes.)
2005 GC-STC install art 3

FIGURE 3-3

10. Install the belt to the spindle pulley. When replacing the belt, see figure below.

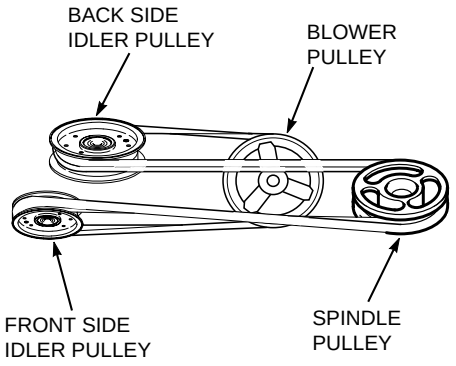

11. Install the plastic belt cover and secure with the plastic wing nuts. See Page 12 of the Illustrated Parts List for proper installation.

12. Install the hopper mounting brackets (p/n 451512 & p/n 451595) to the outside of the frame on the rear of the machine using 3/8-16 x 1" hex head bolts (p/n 04001-19) and 3/8-16 elastic stop nuts (p/n 04021-09). See Figure 3-6, Page 7.

13. Install the catcher support bracket onto the rear of the machine and secure with 5/16-18 x 1" carriage bolts (p/n 04003-04) and 5/16-18 serrated flange nuts (p/n 04019-03). See Figure 3-4.

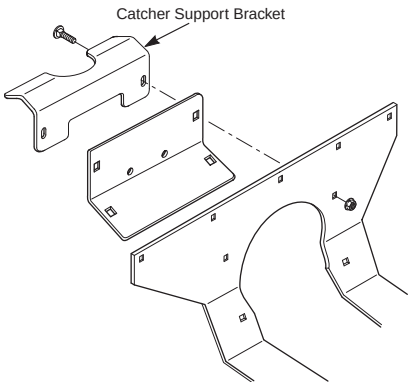

FIGURE 3-4

14. With the help of an assistant, install the hopper assembly into the hopper mounting brackets. See Figure 3-6, Page 7.

15. Install the hose from the blower assembly to the hopper assembly. Secure using the 8-1/2" clamps.

-NOTE-

When installing this catcher on machines equipped with an air cooled engine the discharge hose should be shortened to 56" in length.

16. Install the weight support bar to the front of the machine by resting it directly on top of the caster support arms and sliding it tight against the frame of the machine. Secure the weight bar to the machine using (2) bar clamps, (4) 3/8-16 x 1-1/2" bolts and (4) 3/8-16 elastic stop nuts. See Figure 3-5.

17. Install the weight assemblies to the weight support bar and secure them to the bar using the 1/2"x 6-1/4" pin and lanyard. See Figure 3-5.

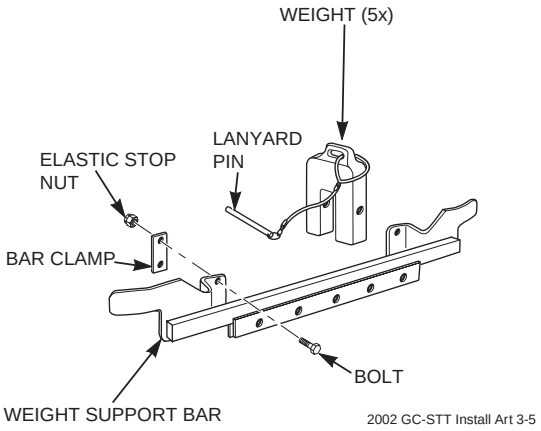

FIGURE 3-5

18. Operate and test.

Item #	Part #	Description
1	04001-19	Bolt, Hex Head 3/8-16 x 1"
2	04021-09	Nut, Elastic Stop 3/8-16
3	04066-03	Quick Pin
4	423670	Spacer, Hitch
5	451512	Hitch Bracket Weldment
	451595	Hitch Bracket Weldment, Floating

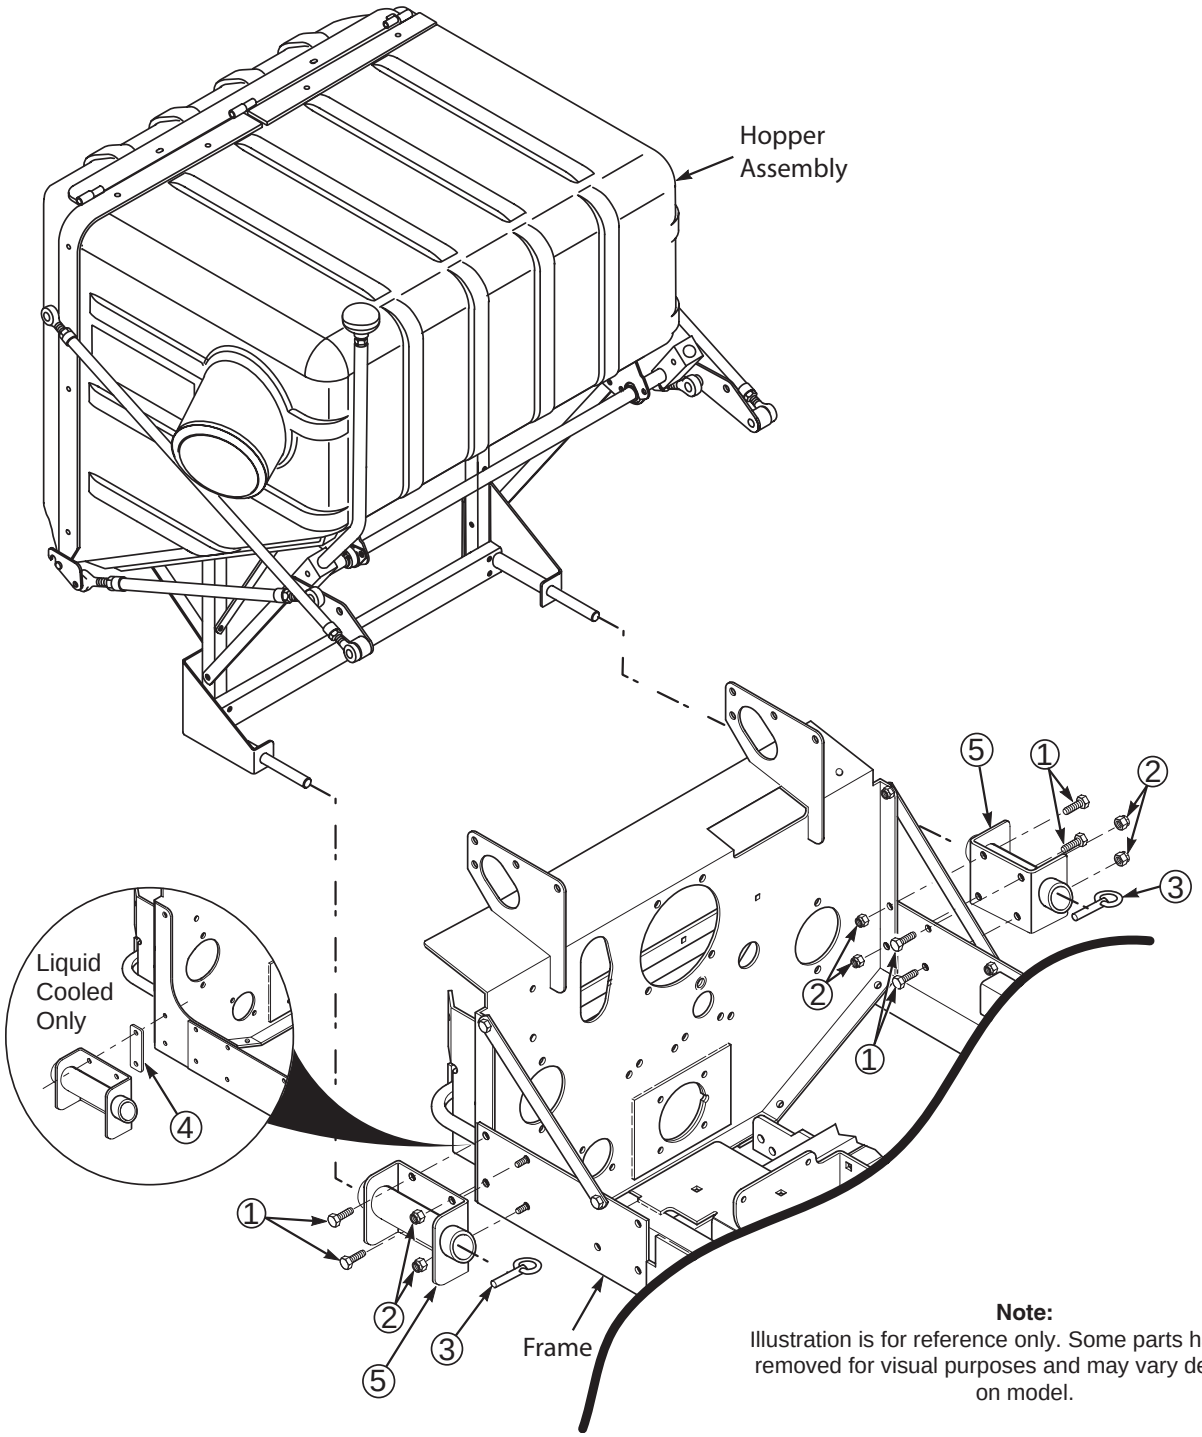

Note:
Illustration is for reference only. Some parts have been removed for visual purposes and may vary depending on model.

FIGURE 3-6

6.1 GRASS CATCHER REMOVAL INSTRUCTIONS

1. Prepare the work area making sure that it is a clean, safe environment.

2. Remove the rubber strap holding the adapter to the blower assembly. See Figure 5-1.

3. Remove the belt from the spindle pulley and the large hair pin securing the blower to the discharge mounting bracket.

4. Remove the pin holding the blower assembly to the mounting bracket on the cutter deck and remove the blower assembly. See Figure 5-1.

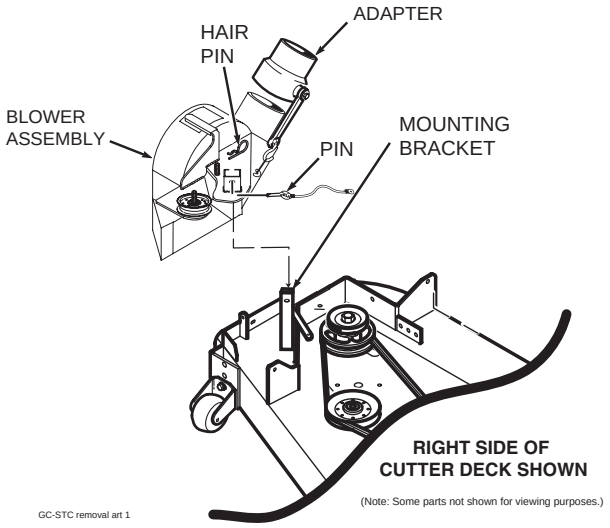

FIGURE 5-1

5. Remove the two (2) pins holding the hopper assembly to the mounting brackets on the rear of the machine. See Figure 5-2.

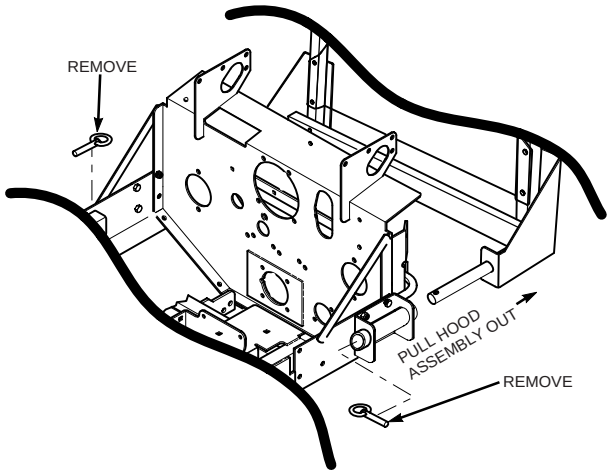

FIGURE 5-2

6. With the help of an assistant, remove the hopper assembly.

7. Remove the front weights by removing the quick pins.

8. Re-install the side discharge chute to the opening on the cutter deck. Replace the two (2) outside mounting bolts on the discharge chute with the clevis pins (p/n 04064-15) and rue cotter pins (p/n 04069-03). See Figure 5-3.

9. Re-install the cutter deck belt cover.

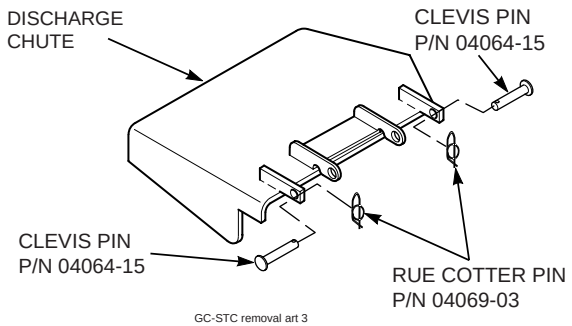

FIGURE 5-3

⚠WARNING

DO NOT OPERATE WITHOUT DISCHARGE CHUTE, MULCHING KIT, OR ENTIRE GRASS CATCHER INSTALLED

MAINTENANCE

5.1 MAINTENANCE CHART - RECOMMENDED SERVICE INTERVALS

HOURS							Procedure	Comments
Break-In (First 10)	8	20	40	100	200	500		
X							Check all hardware for tightness	
X							Inspect hose and adapter	
X							Check belt for proper alignment	
X							Inspect fabric bags	
	X						*Check screen in hopper	Remove debris from screen
	X						Inspect hose and adapter	
	X						Inspect fabric bags	
	X						Check condition of blower	
	X						*Apply grease to blower bearings	See figure below
		X					Check belt for proper alignment	

*** Perform these maintenance procedures more frequently under extreme dusty or dirty conditions.**

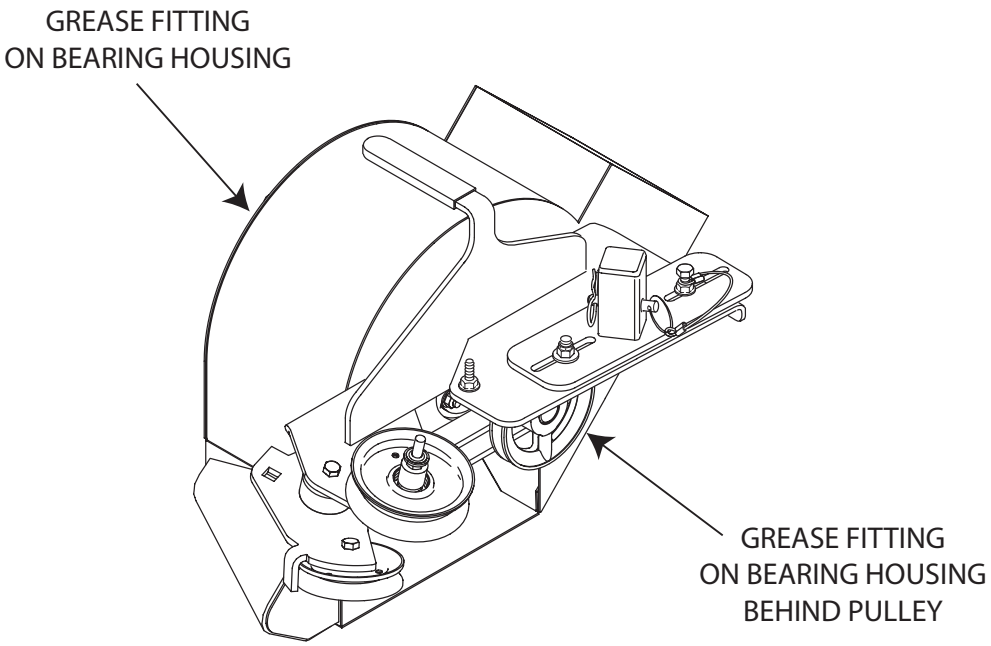

GC-STT BLOWER HOUSING ASSEMBLY

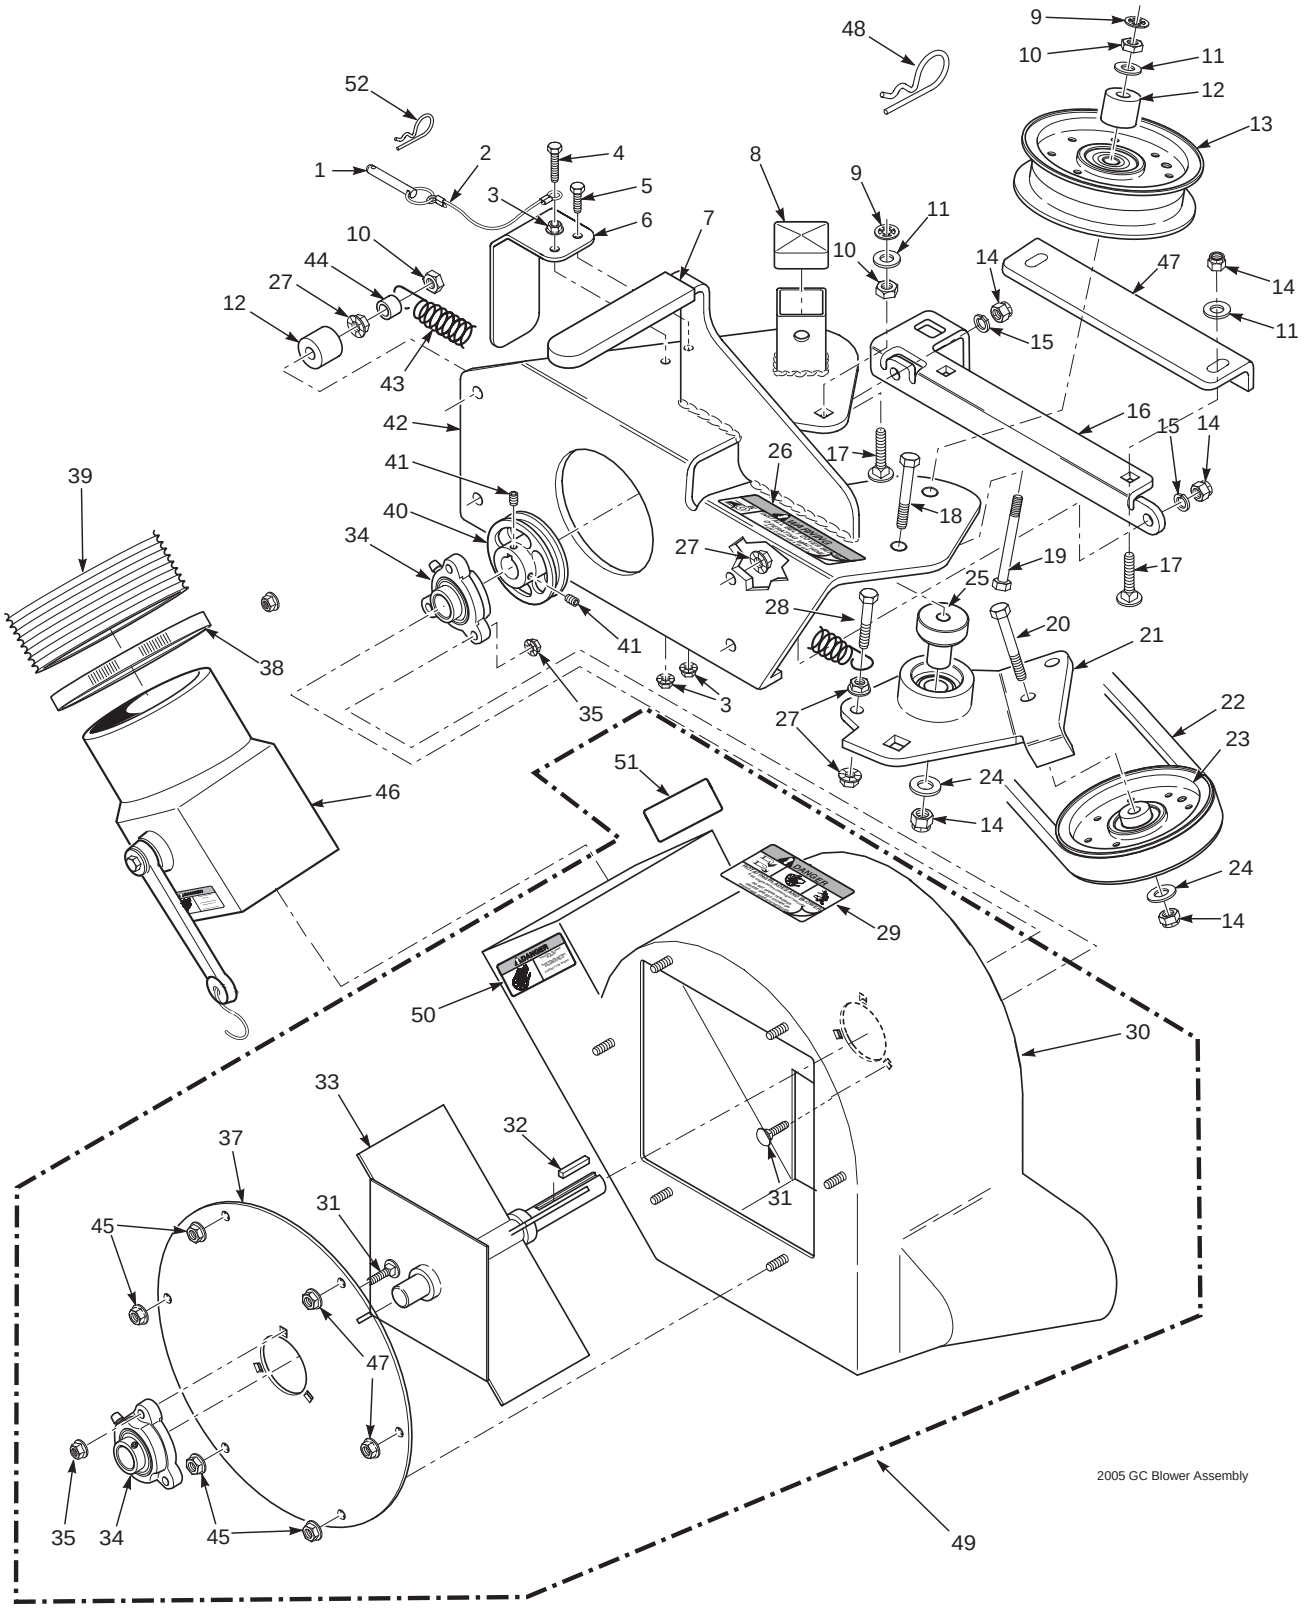

GC-STT BLOWER HOUSING ASSEMBLY

Ref. No.	Part Number	Description
1	04067-07	Pin, Ring 2-1/4" Long
2	481547	Lanyard, Deck Height Pin
3	04019-02	Nut, Serr. Flange 1/4-20
4	04001-59	Bolt, Hex Head 1/4-20 x 1-1/4"
5	04001-01	Bolt, Hex Head 1/4-20 x 3/4"
6	423298	Belt Cover, Rear
7	481428	Grip, Blower Lever
8	482300	Cap, Square
9	04024-02	Nut, Push On 3/8 Thread
10	04021-05	Lock Nut, 3/8-16
11	04041-07	Flatwasher, 3/8-.391 x .938 x .105
12	43277	Spacer
13	483208	Pulley, Idler 3" Dia. - 52"
	483209	Pulley, Idler 4" Dia. - 61" & 72"
14	04021-09	Nut, Elastic Stop 3/8-16
15	04030-04	Lockwasher, 3/8-16
16	423933	Plate, Catch Mounting
	423952	Plate, Catch Mounting - 72"
17	04003-05	Bolt, Carr. 3/8-16 x 1-1/2"
18	04001-54	Bolt, Hex Head 3/8-16 x 3" - 52"
	04001-46	Bolt, Hex Head 3/8-16 x 2-1/4"
19	04001-81	Bolt, Hex Head 3/8-16 x 3-1/2"
20	04001-21	Bolt, Hex Head 3/8-16 x 1-3/4"
21	461427	Idler Arm Assembly, GC-STT 52"
	461928	Idler Arm Assembly, GC-STT 61"
	461928	Idler Arm Assembly, GC-STT 72"
22	482398	Belt, GC-STT 52"
	482379	Belt, GC-STT 61"
	482831	Belt, GC-STT 72"
23	483189	Pulley, 3-1/2" O.D., GC-STT 52"
24	04043-04	Washer, 3/8 Hardened
25	43504	Pivot, Idler - 52"
	43575	Pivot, Idler - 61" & 72"
26	483402	Decal, Belt Cover
27	04019-04	Nut, Serr. Flange 3/8-16
28	04001-136	Bolt, Hex Head 3/8-16 x 1-1/2 Gr. 8
29	483391	Decal, Danger
30	461681	Blower Housing w/Decals
31	04003-12	Bolt, Carr. 5/16-18 x 3/4" Gr. 5
32	04063-06	Key, 1/4 x 1/4 x 1-1/2"
33	461796	Fan Weldment
34	483034	Bearing Assembly
35	04021-10	Nut, Elastic Stop 5/16-18
36	04040-04	Flatwasher, 5/16-.344 x .688 x .065
37	421319	Cover, Blower Housing
38	48136-02	Clamp, 8-5/8" Max Dia.
39	48135-14	Hose, 8.00" Dia. x 60.50" Long
	48135-15	Hose, 8.00" Dia. x 68.00" Long - 72A
40	482298	Pulley, 4-3/4" O.D. - 1" Bore
41	04012-04	Set Screw, 5/16-18 x 3/8"
42	461683	Frame, Blower Mount - 52"
	461684	Frame, Blower Mount - 61"
	461685	Frame, Blower Mount - 72"
43	481522	Spring, Main Drive
44	43212	Spacer
45	04019-03	Nut, Serr. Flange 5/16-18
46	461723	Adapter w/Strap
47	423933	Plate, Blower Catch
	423939	Plate, Blower Catch - 72"
48	04062-05	Hair Pin Cotter, .243 x 4"
49	461680	Blower Housing Assembly, GC-STT
50	483393	Decal, Rotating Blower
51	483392	Decal, Blower
52	04062-04	Hair Pin Cotter, .177 x 3-1/4"

GC-STT BLOWER MOUNTING COMPONENTS

FOR MACHINES WITH A SERIAL NUMBER OF 8619999 OR LOWER ONLY

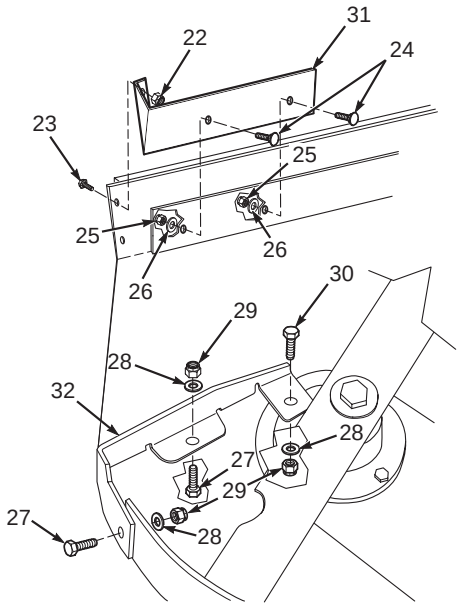

UNDER SIDE OF CUTTER DECK SHOWN

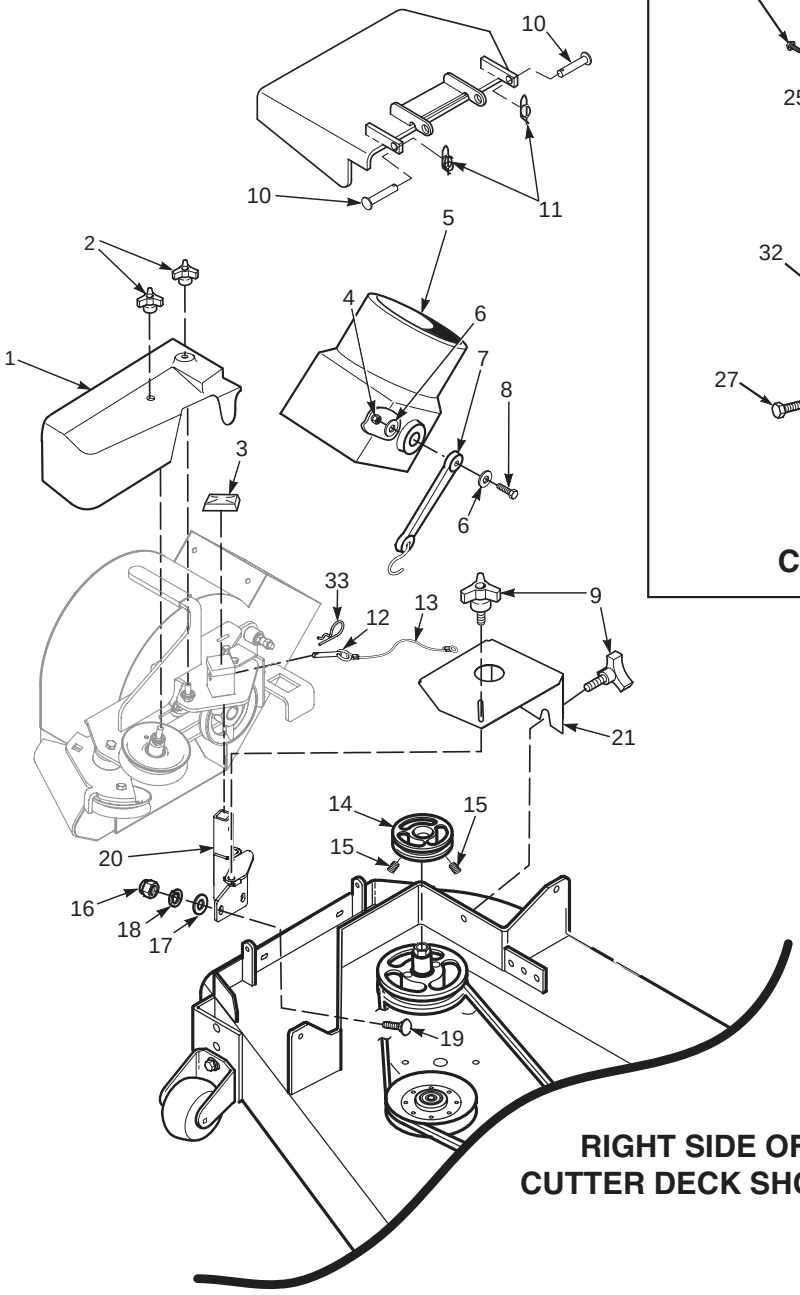

RIGHT SIDE OF CUTTER DECK SHOWN

390STT0203D

GC-STT BLOWER MOUNTING COMPONENTS

Ref. No.	Part Number	Description
1	482406	Belt Cover, GC-STT - 52"
	483226	Belt Cover, GC-STT - 61" & 72"
2	04029-04	Wingnut, Plastic 3/8" Small
3	482300	Cap, Square Vinyl
4	04021-08	Nut, Elastic Stop 1/4-20
5	461723	Adapter w/Strap
6	04040-14	Flatwasher, 1/4-.312 x .750 x .065
7	48137-04	Rubber Strap 7-3/4"
8	04001-59	Bolt, Hex Head 1/4-20 x 1-1/4"
9	481625-01	Knob W/Stud, 3/8-16 x 1-1/4"
10	04064-15	Clevis Pin, 5/16 x 1-1/2"
11	04069-03	Pin, Rue Cotter 5/16 Dia.
12	04067-10	Pin, Ring 1/2 x 2-1/4"
13	481547	Lanyard
14	482587	Pulley, 4-1/2" for 52" Deck
	482377	Pulley, 5-1/2" for 61" Deck
	482830	Pulley, 6-1/4" for 72" Deck
15	04012-04	Setscrew, 5/16-18 x 3/8"
16	04021-07	Nut, Elastic Stop 1/2-13
17	04040-07	Flatwasher, 1/2-.531 x 1.062 x .095
18	04030-06	Lockwasher, 1/2"
19	04001-71	Bolt, Hex Head 1/2-13 x 1-1/2" Grade 5
20	461418	Mounting Post Weldment, Blower - 52"
	451413	Mounting Post Weldment, Blower - 61"
	451657	Mounting Post Weldment, Blower - 72"
21	425695	Belt Cover, - 52"
	462467	Belt Cover Assembly, - 61" w/Cap
	484368	Cap, Spindle (not shown) 61" Only
	423940	Belt Cover, - 72"
22	04019-02	Nut, Serrated Flange 1/4-20
23	04017-05	Bolt, Hex Head 1/4-20 x 3/4"
24	04003-23	Bolt, Carriage 3/8-16 x 1"
25	04021-09	Nut, Elastic Stop 3/8-16
26	04041-07	Flatwasher, 3/8-.391 x .938 x .105
27	04001-09	Bolt, Hex Head 5/16-18 x 1"
28	04040-15	Flatwasher, 5/16-.375 x .875 x .083
29	04021-10	Nut, Elastic Stop 5/16-18
30	04001-12	Bolt, Hex Head 5/16-18 x 1-3/4"
31	423629	Baffle, 52"
	423448	Baffle, 61"
	423932	Baffle, 72"
32	423956	Baffle, 52" Deck
	423957	Baffle, 61" Deck
	423958	Baffle, 72" Deck
33	04062-04	Hair Pin Cotter, .177 x 3-1/4"

SCAG

GC-STT-CS HOPPER COMPONENTS

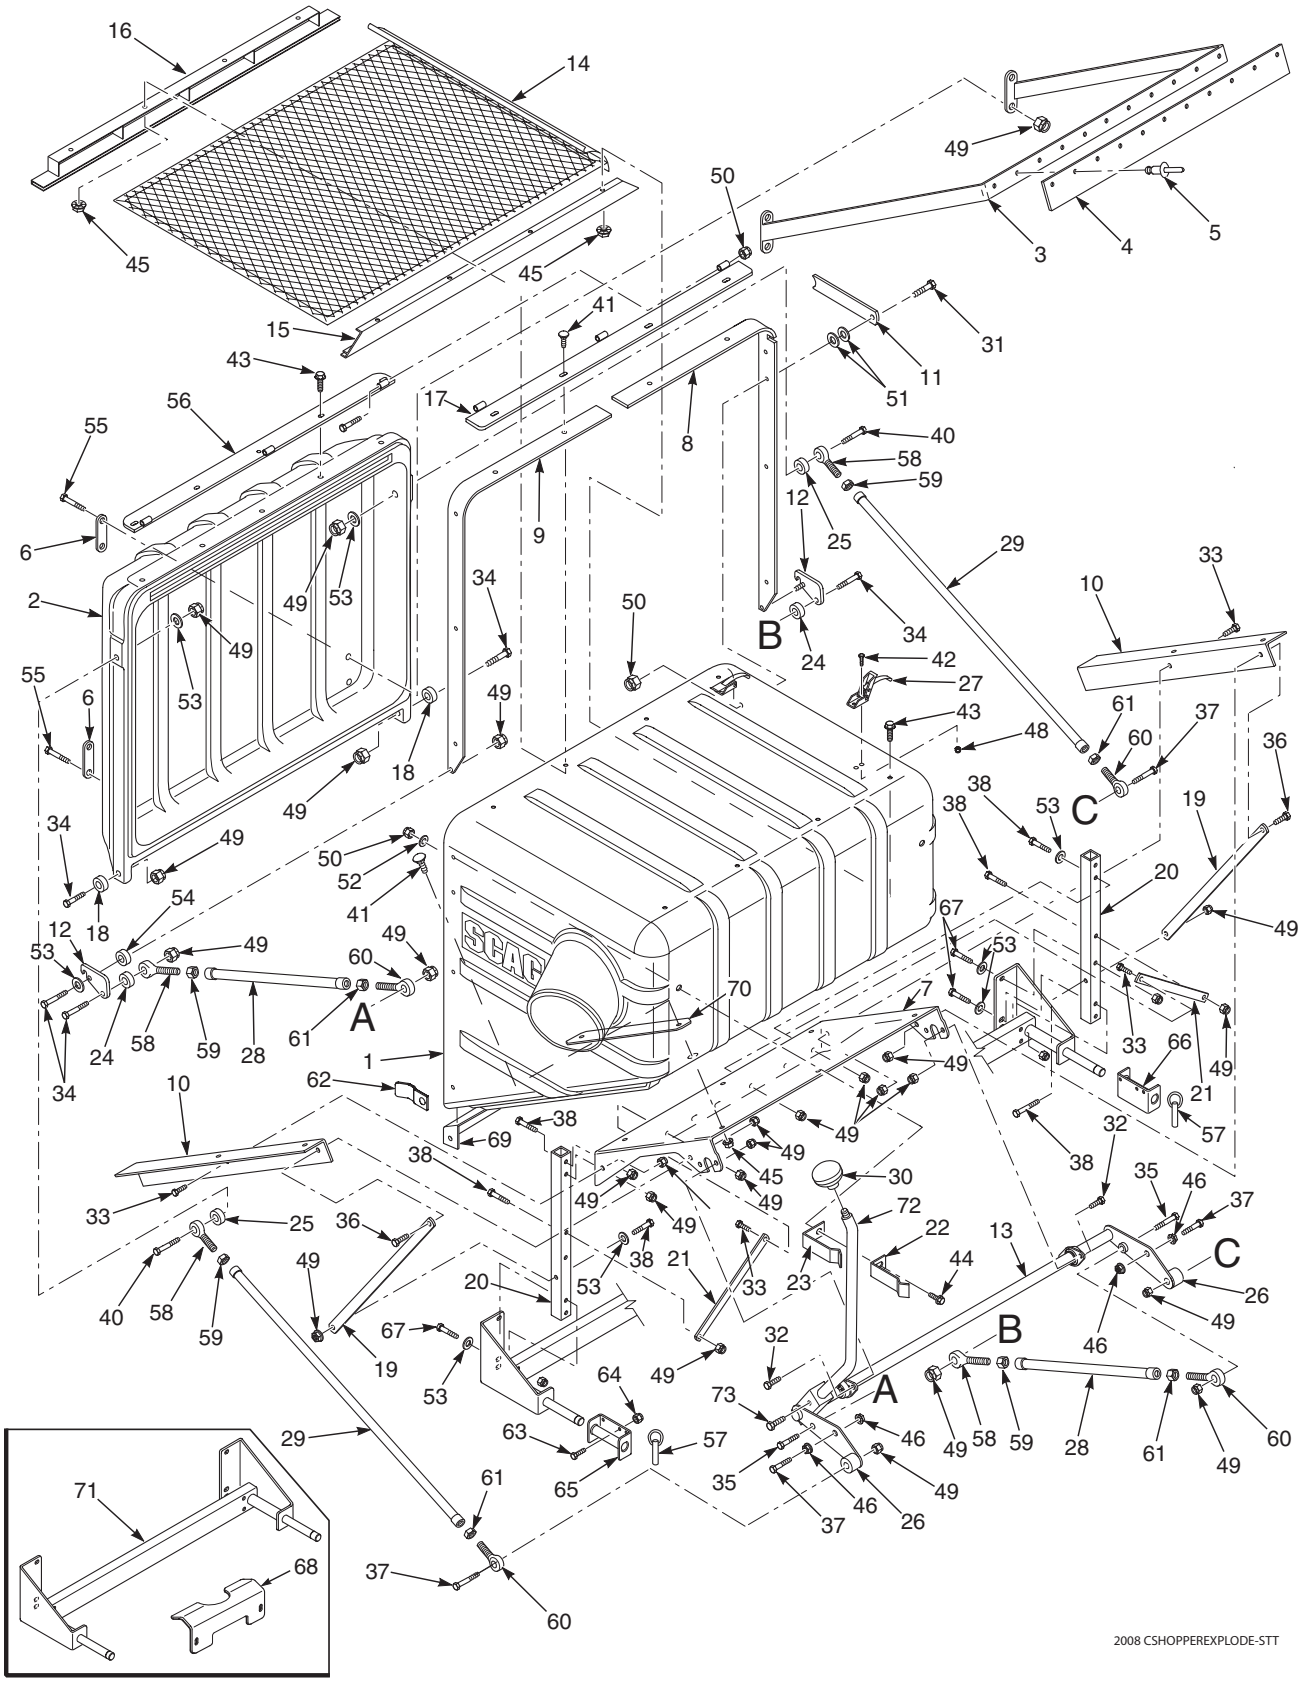

GC-STT-CS HOPPER COMPONENTS

Ref. No.	Part Number	Description
1	483038	Hopper, GC-STT-CS
2	482732	Door, GC-CS
3	461626	Sweeper Weldment, GC-CS
4	482777	Pad, Rubber
5	04090-02	Pop Rivet, 3/16 x .652
6	423834	Plate, Stiffener
7	423938	Support Frame, Hopper
8	423849	Hinge Bracket, LH
9	423850	Hinge Bracket, RH
10	423858	Bracket, Hopper Support
11	423837	Latch, Door Prop
12	423840	Plate, Latch
13	451980	Bellcrank Weldment, Lever
14	451601	Debris Screen Weldment
15	451602	Screen Support Weldment, Rear
16	451603	Screen Support Weldment, Front
17	451607	Hinge Weldment, Hopper
18	43631	Spacer
19	423830	Brace Stiffener, Short
20	423828	Tube, Upright
21	422386	Brace, Engine Mount
22	423862	Latch, Dump Rod Inner
23	423864	Latch, Dump Rod Outer
24	43063	Spacer
25	43282	Spacer
26	43277	Spacer
27	481309	Latch, Hood
28	43641	Linkage Assembly, Lower
29	43640	Linkage Assembly, Upper
30	481245	Knob
31	04001-10	Bolt, Hex Head 5/16-18 x 1-1/4"
32	04001-18	Bolt, Hex Head 3/8-16 x 3/4"
33	04001-19	Bolt, Hex Head 3/8-16 x 1"
34	04001-20	Bolt, Hex Head 3/8-16 x 1-1/2"
35	04001-21	Bolt, Hex Head 3/8-16 x 1-3/4"
36	04001-32	Bolt, Hex Head 3/8-16 x 1-1/4"
37	04001-45	Bolt, Hex Head 3/8-16 x 2"
38	04001-46	Bolt, Hex Head 3/8-16 x 2-1/4"
39	04001-63	Bolt, Hex Head 5/16-18 x 3-1/2"
40	04001-77	Bolt, Hex Head 3/8-16 x 3-1/2"
41	04003-04	Bolt, Carriage 5/16-18 x 1"
42	04010-01	Screw, #10-32 x 1/2"
43	04017-16	Cap Screw, 5/16-18 x 3/4" Serr. Flan.
44	04017-17	Cap Screw, 5/16-18 x 1" Serr. Flan.
45	04019-03	Nut, 5/16-18 Serrated Flange
46	04019-04	Nut, 3/8-16 Serrated Flange
47	04020-12	Nut, 3/8-16 UNC Jam
48	04021-01	Nut, #10-32 Elastic Stop
49	04021-09	Nut, 3/8-16 Elastic Stop
50	04021-10	Nut, 5/16-18 Elastic Stop
51	04032-01	Washer, Special Wave
52	04040-15	Washer, 5/16-.375 x .875 x .083 Flat
53	04041-07	Washer, 3/8-.931 x .938 x .105 Flat
54	43642	Bushing, Hopper Latch GC-CS
55	04001-54	Bolt, Hex Head 3/8-16 x 3"
56	451598	Hinge Weldment, Door
57	04066-03	Pin
58	481538	Rod End Male, 3/8-24 LH Thread
59	04020-26	Nut, 3/8-24 UNF LH Thread
60	481539	Rod End Male, 3/8-24 RH Thread
61	04020-25	Nut, 3/8-24 UNF RH Thread
62	423865	Alignment Bracket, GC-CS
63	04001-19	Bolt, Hex Head 3/8-16 x 1"
64	04021-09	Nut, 3/8-16 Elastic Stop
65	451512	Hitch Bracket Weldment
66	451595	Hitch Bracket Weldment, Floating
67	04001-51	Bolt, Hex Head 3/8-16 x 3-3/4"
68	423690	Support Bracket, Catcher
69	423855	Bracket, Lower Stiffener
	423859	Backing Plate, Hopper (Not Shown)
70	423836	Retainer Strip, Hopper
71	451596	Frame Weldment
72	44169	Rod, Dump Lever
73	04001-12	Bolt, Hex Head 5/16-18 x 1-3/4"
	04012-10	Nut, 5/16-18 Elastic Stop (Not Shown)

GC-STT FRONT WEIGHT COMPONENTS

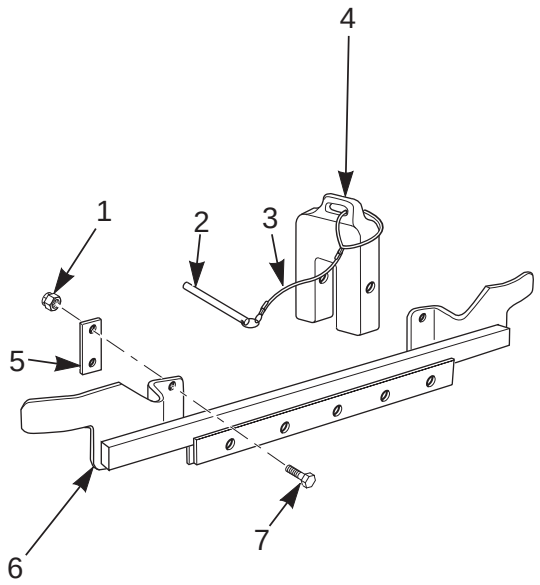

GC-STT FRONT WEIGHT COMPONENTS

Ref. No.	Part Number	Description
1	04021-09	Nut, Elastic Stop 3/8-16
2	04067-06	Pin, 1/2 x 6-1/4"
3	481737	Lanyard, Weight Pin
4	461097	Weight Assembly
5	422586	Clamp, Bar
6	451026	Support Weldment, Front Weights
7	04001-20	Bolt, Hex Head 3/8-16 x 1-1/2"

GC-STT-CS DECALS

483402

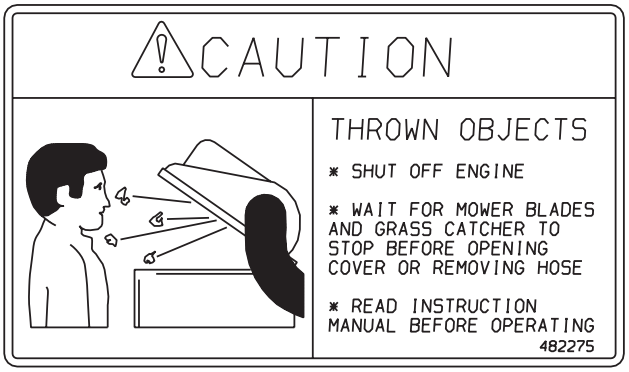
CAUTION
THROWN OBJECTS
* SHUT OFF ENGINE
* WAIT FOR MOWER BLADES AND GRASS CATCHER TO STOP BEFORE OPENING COVER OR REMOVING HOSE
* READ INSTRUCTION MANUAL BEFORE OPERATING
482275

482275

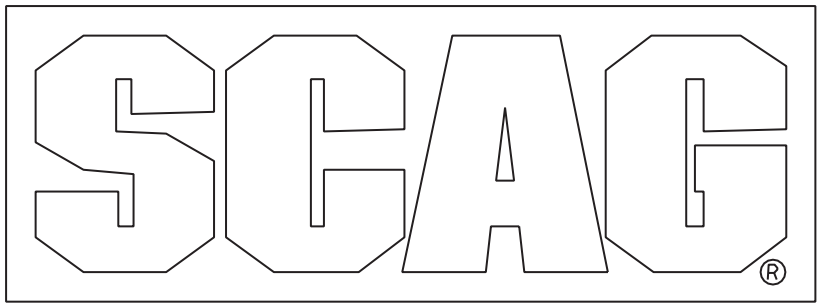

481327

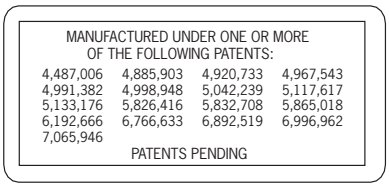

483044

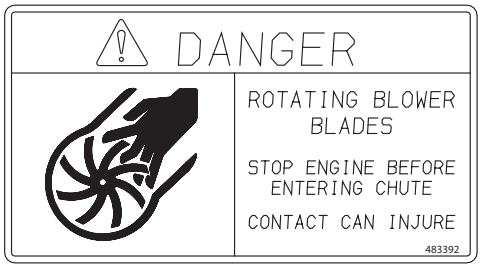

483392

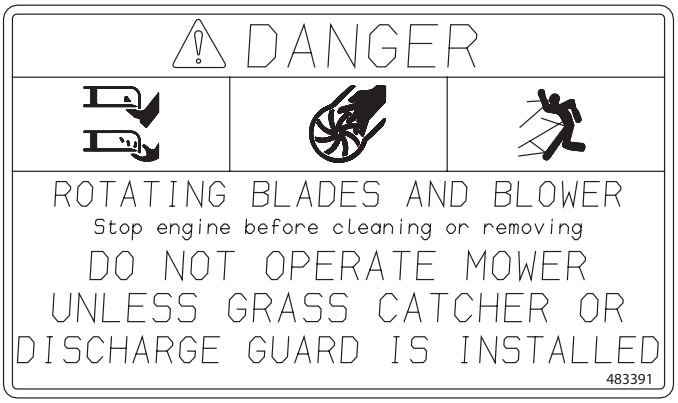
DANGER
ROTATING BLADES AND BLOWER
Stop engine before cleaning or removing
DO NOT OPERATE MOWER UNLESS GRASS CATCHER OR DISCHARGE GUARD IS INSTALLED
483391

483391

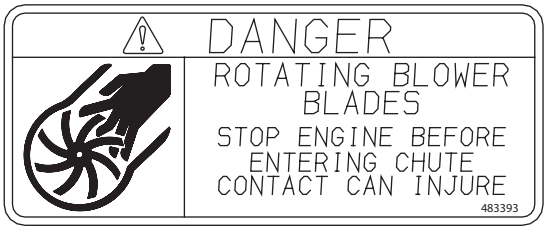

483393

LIMITED WARRANTY- COMMERCIAL ACCESSORY

Any part of the Scag commercial accessory manufactured by Scag and found, in the reasonable judgment of Scag, to be defective in material or workmanship, will be repaired or replaced by an Authorized Scag Service Dealer without charge for parts and labor.

The Scag accessory, including any defective part, must be returned to an Authorized Scag Service Dealer within the warranty period. The expense of delivering the accessory to the dealer for warranty work and the expense of returning it back to the owner after repair or replacement will be paid for by the owner. Scag's responsibility in respect to claims is limited to making the required repairs or replacements, and no claim of breach of warranty shall be cause for cancellation or rescission of the contract of sale of any Scag machine. Proof of purchase will be required by the dealer to substantiate any warranty claim. All warranty work must be performed by an Authorized Scag Service Dealer.

This warranty is limited to 90 days from the date of original retail purchase for any Scag accessory that is used for commercial purposes, or any other income-producing purpose including rental use.

The warranty for the blower assembly (excluding the belt) is limited to 1-year from the date of original retail purchase. 90 Days for rental use.

This warranty does not cover any accessory that has been subject to misuse, neglect, negligence, or accident, or that has been operated in any way contrary to the operating instructions as specified in the Operator's Manual. The warranty does not apply to any damage to the accessory that is the result of improper maintenance, or to any accessory or parts that have not been assembled or installed as specified in the Operator's Manual.

The warranty does not cover any accessory that has been altered or modified. In addition, the warranty does not extend to repairs made necessary by normal wear, or by the use of parts or accessories which, in the reasonable judgment of Scag, are either incompatible with the Scag mower or adversely affect its operation, performance or durability. This warranty does not cover engines and electric starters, which are warranted separately by their manufacturer.

Scag Power Equipment reserves the right to change or improve the design of any accessory without assuming any obligation to modify any accessory previously manufactured.

All other implied warranties are limited in duration to the 90 day warranty period. Accordingly, any such implied warranties including merchantability, fitness for a particular purpose, or otherwise, are disclaimed in their entirety after the expiration of the appropriate ninety day warranty period. Scag's obligation under this warranty is strictly and exclusively limited to the repair or replacement of defective parts and Scag does not assume or authorize anyone to assume any other obligation for them. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

Scag assumes no responsibility for incidental, consequential or other damages including, but not limited to, expense for gasoline, oil, expense of delivering the machine to an Authorized Scag Service Dealer and expense of returning it back to the owner, mechanic's travel time, telephone or telegram charges, rental of a like product during the time warranty repairs are being performed, travel, loss or damage to personal property, loss of revenue, loss of use of the mower, loss of time, or inconvenience. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

© 2011
SCAG POWER EQUIPMENT
DIVISION OF METALCRAFT OF MAYVILLE, INC
www.scag.com

PART NO. 03237 Rev.01
PRINTED 6-2011
PRINTED IN USA